

saas 10W projector

INSTALLATION INSTRUCTIONS



INSTALLING THE PROJECTOR

Choose a suitable location for your projector somewhere outside of the steam room. Make sure that the fibres of the sauna set are sufficiently long to reach the desired location. The projector can also be installed inside the steam room if the power supply is properly encased in an IP54-compliant case. However, installation inside the steam room must not be more than one metre above the floor.

Install the projector with the fibre head output pointing either to the side or downwards.

Secure the projector with screws using the mounting holes. Push the joint end of the optical fiber bundle as deep into the projector as it goes. Lock in the joint head with a locking screw.

DIMMING THE PROJECTOR

The projector can be dimmed using either a 1-10V signal, a potentiometer, or a push-button switch.

1-10 V control signal:

Control using an external controller; the light will go out with a 1V signal.

Potentiometer:


With a 100K ohm potentiometer, we recommend a logarithmic potentiometer to obtain a more flexible range of adjustment.

Push-button function:


Press for under a second; the lights will turn on. By pressing for over a second, the lights will be dimmed, and with a second press, they will brighten again.

NOTE!

Do not change the power supply's DIP switch position (Max. 350ma)!

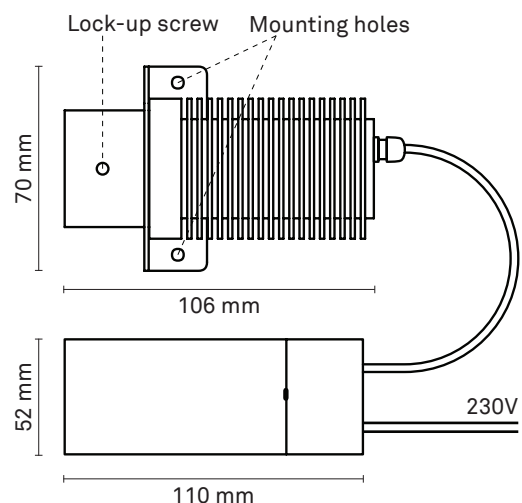

1-10V signal / 100KΩ potentiometer

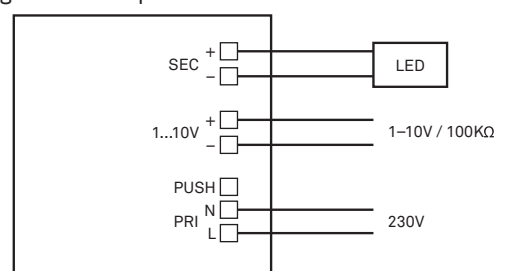

Switch dim

