


saas sauna compact

INSTALLATION INSTRUCTIONS




PACKAGE INCLUDES:

- 1 x 3W LED projector + driver
- 1 x glass fibre bundle
- 1 x installation sleeve in brass incl. lens
- 1 x 1,5mm hex wrench

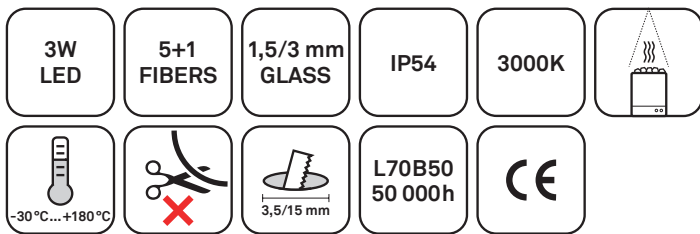

Fiber length

5 x 3,0 m / 1,5 mm
1 x 5,0 m / 3,0 mm + \square \varnothing 15 mm

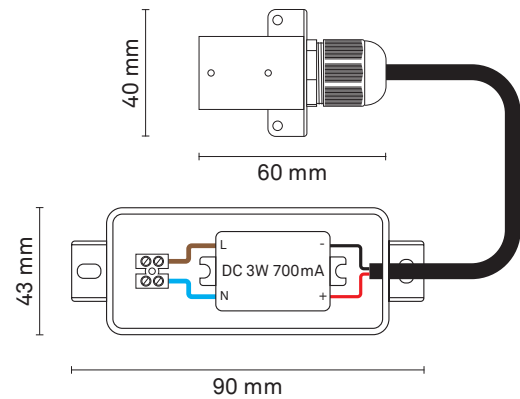

INSTALLATION OF PROJECTOR

1. Fasten projector to the wall with two screws. There are ready made holes on the sides of the projector.
2. Connect the projector to power. Att! This should always be handled by a professional electrician.
3. The fibre bundles common end is inserted in the hole of the projector. The bundle is secured with a screw.

INSTALLATION OF FIBRES

Choose the positions of the light points. Check that the fibre lengths are sufficient for your chosen positions. Drill 3,5mm holes for the fibres and thread them through the holes. If needed use epoxy glue to install the fibres. The stove lens requires a 15mm hole.

The fibre tails don't need separate insulation or tubes. Check that the fibre tails aren't squeezed or are bended sharply ($r=15\text{mm}$).

Handle the fibre tails with care! If the fibres are damaged it affects the output of light drastically.

